

Cruise Range


User Guide



TBTTV3B1
TBTTV3T1
hoover-mea.com

1 MACHINE OVERVIEW

- 1 On/Off trigger
- 2 Brushbar On/Off button
- 3 On/Off and charging light
- 4 Handheld release button
- 5 Reach wand
- 6 Powered head/accessory release clip
- 7 Powered head
- 8 Brushbar
- 9 Filter cover release buttons
- 10 Handle
- 11 Battery charger inlet
- 12 Battery release button
- 13 Battery
- 14 Dirt container
- 15 Dirt container release button (hidden)
- 16 Dirt release button
- 17 Continuous power latch (hidden)

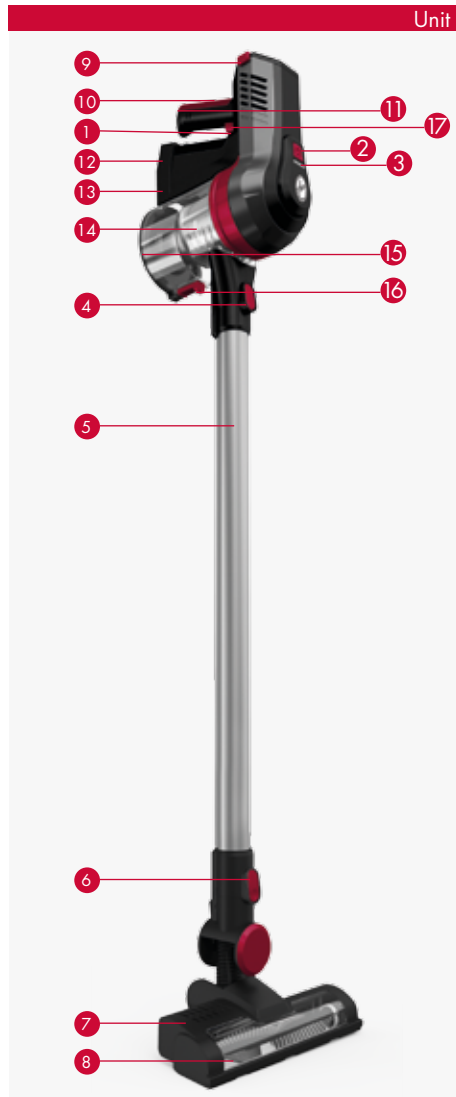

Accessories



3in1 tool



Parquet tool
(some models only)



Up-top tool
(some models only)



Flexi crevice tool
(some models only)

GENERAL SAFETY INFORMATION

2

- 1 This vacuum cleaner does not stay upright without constant support, in between uses lie flat on the floor in a suitable location so it does not become a trip hazard or can be stepped on.
- 2 Only use the vacuum cleaner indoors on dry surfaces and keep the area you're cleaning well lit.
- 3 Keep fingers, hair and loose clothing away from moving parts and openings whilst using the vacuum cleaner.
- 4 This vacuum cleaner can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the vacuum cleaner in a safe way and understand the hazards involved. Children should not play with the vacuum cleaner. Cleaning and user maintenance should not be made by children without supervision.
- 5 Only Hoover recommended tools and accessories should be used with this vacuum cleaner.
- 6 The battery must be removed from the appliance before it is scrapped.
- 7 Don't charge the vacuum cleaner outdoors, or leave the charger connected to the mains when not in use.
- 8 Don't use this vacuum cleaner if it has been dropped, damaged, immersed in water or left outdoors.
- 9 Don't handle the charger plug or use the vacuum cleaner with wet hands.
- 10 Don't run over the charger cord or use the vacuum cleaner if the charger cord or plug is damaged.
- 11 Don't vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.
- 12 Don't attempt to remove blockages with sharp objects as this may cause damage to your vacuum cleaner.
- 13 Don't vacuum up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).
- 14 Don't use the vacuum cleaner with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.
- 15 Don't leave the vacuum cleaner in one spot for an extended period of time when the brushbar is activated. This vacuum cleaner is fitted with a rotating brushbar which if left in one place may cause damage to the floor surface.
- 16 Always turn off, unplug the vacuum cleaner from the charger and remove the battery before carrying out any maintenance. Please refer to the appropriate section in the user guide to review necessary precautions.
- 17 Always make sure the filter and dirt container are fitted correctly before using your vacuum cleaner.
- 18 Always switch off the vacuum cleaner before disconnecting or connecting the reach wand and accessories.
- 19 Keep all openings clear and free from debris as this may affect the airflow/suction.
- 20 Always protect the charger cord from heated surfaces or when near open flames.
- 21 If charging the vacuum cleaner through an extension cord, use only approved extension cords, non-approved extension cords

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE.

3 OPERATION

PLEASE READ 'GENERAL SAFETY INFORMATION' AT THE BEGINNING BEFORE USE

CAUTION: Always switch off the vacuum cleaner before connecting or disconnecting the handheld/attachments or removing and emptying the dirt container.


IMPORTANT: The vacuum cleaner is equipped with overheat protection. If for any reason the vacuum cleaner does overheat the thermostat will automatically turn the vacuum cleaner off. If this happens, remove the battery. Remove and empty the dirt container also check the vacuum cleaner for blockages. Allow the vacuum cleaner to cool for approximately 1 hour (if you have cleaned the filter please wait 24 hours for the filter to fully dry before putting back into the machine). For best cleaning results, filters require cleaning at least every 3 months and should be replaced every 12 months depending upon use. If the vacuum cleaner is blocked, remove the battery before removing the blockage.

Assembling your Cruise Pole Vac

CAUTION: This vacuum cleaner is not free standing. In between uses or when carrying out any maintenance always lie flat on the floor in a suitable location so it does not become a trip hazard or can be stepped on.



Line up the connector on the reach wand with the Powered Head. Push the reach wand down onto the Powered Head until it clicks into place.

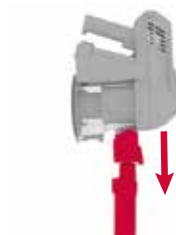

Push the handheld down onto the reach wand until it clicks into place.



The upright slim vacuum cleaner is not free standing and in between uses must always be placed in the wall bracket or laid flat on the floor, in a suitable location so it does not become a trip hazard or can be stepped on.

Fixing the wall bracket



Fully assemble the vacuum but do not attach the battery.



Attach the wall bracket to the handle.



With the wall bracket attached, stand the vacuum close to the wall, in the upright position with the Powered Head flat on the floor.



Holding the wall bracket firmly in place, carefully remove the vacuum. Using a pencil make a small mark for each screw.



Use both screws and wall plugs to secure the wall bracket to the wall. Place covers over the screws.



Firmly press the vacuum handle into the wall bracket to secure.



The tools and the accessory bag can also be stored on the wall bracket.

5 OPERATION

PLEASE READ 'GENERAL SAFETY INFORMATION' BEFORE USE

CAUTION: The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble or heat above manufacturer's maximum temperature limit (60° C/140°F) or incinerate. Replace battery with Hoover battery only. Use of another battery may present a risk of fire or explosion. Dispose of used battery promptly. Keep away from children. Do not disassemble and do not dispose of in a fire. Do not attempt to disassemble the battery or remove any component projecting from the battery terminals. The battery and charger have no user serviceable parts. Fire or injury may result. Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting. Remove the battery from the appliance before it is disposed of safely at your local battery recycling centre.

For best performance, the terminals on both the battery and the appliance must be clean and free from dust and dirt. Do not attempt to recharge non-rechargeable batteries. The battery must be removed from the appliance before it is scrapped. The appliance must be disconnected from the charger before use and when removing or installing the battery into the machine. In case of battery leakages avoid any contact with the skin.


Installing and charging the battery

CAUTION: The appliance must be disconnected from the mains supply when removing the battery.

NOTE: The initial charge is 8 hours, charging will be required before first use. The vacuum can be charged with the handheld either attached to, or detached from, the reach wand. Failure to fully charge the battery before first use (initial charge 8 hours) may result in poor battery performance.



Slide the battery into the back of the handheld. The battery will click into position when correctly fitted.

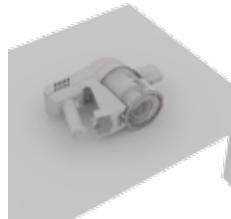

To charge the machine, detach the reach wand and lie the handheld on its side on a flat stable surface. You can also charge the machine whilst attached to the wall mount. Make sure the floorhead and wand are attached together.



Insert the charger lead into the charger inlet located on the back of the handle.



Plug the charger plug into the mains.

Charging the battery

CAUTION: Do not use the vacuum cleaner when the machine is plugged in and charging.
CAUTION: For best performance the terminals on the battery and vacuum cleaner must be clean and free from dust and dirt. The life expectancy of the battery will vary depending on the usage of the vacuum cleaner.



The On/Off and charging light will illuminate continuously whilst the charger is connected.

Red light – The battery is charging.

Green light – The battery is charged (after 5 hours).

If charging for the first time the initial charge time is 8 hours.

CAUTION: This vacuum cleaner has a constantly rotating brushbar when the brushbar 'ON' is selected. Never leave the vacuum cleaner in one spot for an extended period of time as this may damage the floor surface. The brushbar should be ON for carpets and OFF for hard floors.

Using as a pole vacuum cleaner



Squeeze the trigger located underneath the handle, the machine will switch 'On'. The On/Off and charging light will illuminate green indicating the power is on and the machine is charged. Release the trigger to switch the machine 'Off'.



Squeeze the trigger and push the 'Continuous power latch' towards the trigger. This will lock it into the 'On' position and will continue to power the machine without having to hold in the trigger. Push the latch away from the trigger to unlock and release the trigger.



Press the brushbar's On/Off button to activate. Repeat this process to de-activate the brushbar. The brushbar should be switched ON for carpets and OFF for hard floors.



When the vacuum cleaner is in use the On/Off and charging light will illuminate and flash red when the battery is running low. When the red light flashes the machine will turn off in 20 seconds. The user should recharge the machine.

7 OPERATION

Using as a handheld vacuum cleaner

Always take extra care when using the vacuum cleaner on the stairs.




Press the handheld release clip. Pull to separate the handheld from the reach wand.



The reach wand when attached to the Powered Head/accessory is not free standing, place safely and securely to one side.



Choose an accessory (pictures illustrated dependent upon model).

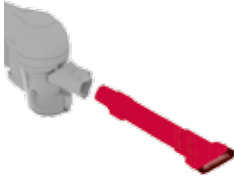

Push the chosen accessory into the handheld until it clicks into place.



Squeeze the trigger located underneath the handle, the machine will switch 'On'. The On/Off and charging light will illuminate green indicating the power is on and the machine is charged. Release the trigger to switch the machine 'Off'.



Squeeze the trigger and push the 'Continuous power latch' towards the trigger. This will lock it into the 'On' position and will continue to power the machine without having to hold in the trigger. Push the latch away from the trigger to unlock and release the trigger.




All of the accessories including the Powered Head can be attached directly onto the handheld.

Using as a reach pole vac

The reach wand can be used for hard to reach places.



Press the Power Head/ accessory release clip and pull to remove the Powered Head from the reach wand.

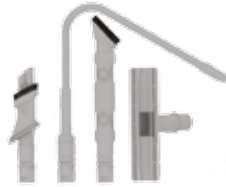

Choose an accessory (pictures illustrated dependent upon model).



Push the chosen accessory into the reach wand until it clicks into place.



Squeeze the trigger located underneath the handle, the machine will switch 'On'. The On/ Off and charging light will illuminate green indicating the power is on and the machine is charged. Release the trigger to switch the machine 'Off'.



Squeeze the trigger and push the 'Continuous power latch' towards the trigger. This will lock it into the 'On' position and will continue to power the machine without having to hold in the trigger. Push the latch away from the trigger to unlock and release the trigger.




The reach wand can be used for hard to reach places and at different heights for above floor cleaning.




The upright slim vacuum cleaner is not free standing and in between uses must always be placed in the wall bracket or laid flat on the floor, in a suitable location so it does not become a trip hazard or can be stepped on.

Removing the battery

CAUTION: Always remove the battery from the vacuum cleaner before performing maintenance or troubleshooting checks.

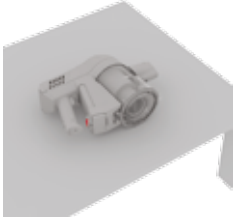

Lie the handheld on its side on a flat stable surface. Press the battery release button.

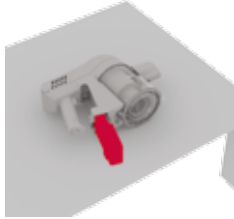

Slide the battery out from the back of the handheld.

Emptying the dirt container

WARNING: Don't over fill the dirt container to avoid blocking the air flow through the vacuum cleaner.



Press the handheld release clip. Pull to separate the handheld from the reach wand.



The reach wand when attached to the Powered Head/accessory is not free standing. Place safely and securely to one side.



Ensure the battery has been removed and hold the handheld over a bin, press the dirt release button to allow dirt/debris to fall out.

Cleaning the post-motor filter

CAUTION: Always remove the battery from the vacuum cleaner before performing maintenance or troubleshooting checks. For continuous best performance the filter requires cleaning every 3 months and should be replaced every 12 months depending upon use. Do not use your vacuum cleaner without the filters in place.



Press the filter cover release buttons located on both sides of the filter cover and pull to remove the filter from the machine.



Pull to separate the filter from the filter cover/holder. Tap the filter and filter cover/holder over a bin to remove any dirt/debris. Wash the filter under running water (40 degrees max).



Leave for 24hrs or until fully dry before replacing.

Cleaning the filter and separator

CAUTION: Always empty the dirt container before cleaning the separator and filter and remove the battery, reach wand/accessories from the handheld.



Turn the handheld over and press the dirt container release button. Pull the dirt container forward and up away from the handheld to remove.



Twist the mesh filter anti-clockwise to unlock, lift to remove from the separator.



Twist the separator anti-clockwise to unlock, lift to remove from the handheld.

11 MAINTENANCE

Cleaning the filter and separator



Tap the mesh filter and separator over a bin to remove any dirt/debris. Using a dry cloth wipe away any remaining dirt/debris.

Refitting the separator, filter and dirt container

CAUTION: Incorrect fitting of the separator and filter will reduce suction.



Line up the arrows around the side of the separator with the arrows on the handheld. Twist the separator clockwise locking it into place.



Refit the mesh filter with the rim of the filter at the top. Twist the filter clockwise and lock into place.



Tilt the dirt container slightly forward and line up onto the handheld.



When the dirt container is seated on the handheld push the dirt container backwards to lock into place.

IMPORTANT: If the brushbar has been obstructed, the Motor Protection Sensor may have been activated and the brushbar will seize. Remove the Powered Head from the machine and clear any obstruction. Refit the Powered Head, switch on the vacuum cleaner by pressing the trigger and press the brushbar on/off button.

Removing and replacing the brushbar



Slide to release the brushbar. The cover can not be removed.



Lift to remove the left side of the brushbar first.



Clear any threads or hair from both ends of the brushbar and any dirt/debris inside the housing of the Powered Head.



When re-fitting the brushbar fit the right side into the housing first. Then line up and slot into place the left side.

Removing blockages from the Powered Head



The brushbar should be removed from the Powered Head before attempting to remove any blockages. Using scissors remove any threads or hair from around the brushbar and clear any dirt or debris from Powered Head.

Removing blockages from reach wand



To test for a blockage in the reach wand, drop a small ball of paper into the wand. The paper will drop through if the wand is clear. Use a broom handle or similar blunt object to remove any blockage.

13 MAINTENANCE

Cleaning terminals



Using a dry cloth or soft dusting brush remove any dust/debris from terminals on battery and inside the handheld.

Is there an accessory missing?

- Check the contents panel on the box to make sure the part is included with your vacuum cleaner.

Why does my vacuum cleaner have no power?

- Check the battery is inserted correctly into the vacuum cleaner.
- The battery may not be charged. Go to 'Operation'.
- The terminals on the battery and vacuum cleaner may be dirty. Go to 'Maintenance'.
- Battery might be too hot, remove and allow to cool for 1 hour.
- The vacuum cleaner has overheat protection which will cut the machine out. If this has happened, switch off the vacuum cleaner. Remove and empty the dirt container and check for blockages. Clean the filters and allow the vacuum cleaner to cool for approximately 1 hour (if you have washed the filters you will need to wait 24 hours for the filters to fully dry before putting them back into the vacuum cleaner).

Why isn't the light on the vacuum cleaner lit when the battery is charging?

- Check the battery charger is plugged in. Go to 'Operation'.
- Check the battery is inserted correctly into the handheld. Go to 'Operation'.
- The terminals on the battery and vacuum cleaner may be dirty. Go to 'Maintenance'.

Why won't the vacuum cleaner pick up?

- The dirt container may not be correctly fitted, remove the dirt container from the vacuum cleaner and check it's assembled correctly, refit ensuring it's locked into place.
- The separator is not correctly fitted. Go to 'Maintenance'.
- The filters may be clogged, clean the filters. Go to 'Maintenance'.
- The dirt container may be blocked, empty the dirt container. Go to 'Maintenance'.
- The brush on the Powered Head has not been activated. Go to 'Maintenance'.
- There maybe a blockage in the reach wand. Disconnect from the vacuum cleaner and carefully remove any blockages. Go to 'Maintenance'.

Why won't the brushbar turn?

- The brushbar has not been activated. Go to 'Operation'.
- The Powered Head/brushbar may be obstructed. Go to 'Operation'.

Why is dust escaping from the vacuum?

- The filters may be clogged, clean the filters. Go to 'Maintenance'.
- The separator may be clogged, clean the separator. Go to 'Maintenance'.
- Exhaust filter may be miss-assembled. Go to 'Maintenance'.

15 OTHER INFORMATION

Service and Help

If you have any queries or concerns about using your Hoover, simply visit hoover-mea.com

Consumables

To purchase spares and accessories, please visit hoover-mea.com

The use of genuine Hoover spare parts helps to maintain optimised performance and validates your guarantee.

Technical Specification

Run time 24 minutes

Battery voltage 21.6V

Charge time 5 hours

Weight 2kg

Dust bin capacity 0.6L

Subject to technical change without notice.

© 2016 Techtronic Floor Care Technology Ltd

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This marking on the product(s) and/or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.







الخدمة والمساعدة

إذا كانت لديك أي تساؤلات أو مخاوف متعلقة باستخدام مكنسة هوفر، فتفضل بزيارة الموقع الإلكتروني hoover-mea.com

المستلزمات الاستهلاكية

لطلب شراء قطع الغيار والملحقات، تفضل بزيارة الموقع الإلكتروني hoover-mea.com إن استخدام قطع غيار هوفر الأصلية يساعد في الحفاظ على الأداء المحسن وعلى سلامة ضمانك.

المواصفات الفنية

يصل وقت التشغيل إلى 24 دقيقة.
فولتية البطارية 21.6 فولت
تصل مدة الشحن إلى 5 ساعات
الوزن 2 كجم
سعة صندوق الغبار 0.6 لتر
عرضة للتغيير الفني بدون إشعار.

© Techtron Floor Care Technology Ltd 2016

ينبغي ألا يتم التخلص من نفايات المنتجات الكهربائية عن طريق طرحها مع النفايات المنزلية. الرجاء إعادة تدويرها إن وجدت مراكز إعادة التدوير. راجع الأمر مع السلطة المحلية أو بائع التجزئة للحصول على النصائح المتعلقة بإعادة التدوير.

إن وجود هذه العلامة على المنتج (المنتجات) و/أو المستندات المصاحبة له يعني أن المعدات الكهربائية والإلكترونية المستعملة يجب الخلط بينها وبين النفايات المنزلية العامة. للحصول على المعالجة والاسترداد وإعادة التدوير بشكل صحيح، من فضلك خذ هذا المنتج (هذه المنتجات) إلى نقاط التجميع المخصصة حيث سيتم قبولها دون أي تكلفة. إن التخلص من هذا المنتج بشكل صحيح سيساعد في توفير الموارد الثمينة ويمنع أي تأثيرات سلبية محتملة على صحة الإنسان والبيئة والتي قد تنشأ نتيجة التعامل الخاطيء مع النفايات. الرجاء الاتصال بالسلطة المحلية للحصول على مزيدٍ من التفاصيل حول أقرب نقطة تجميع مخصصة لك.



Li-ion



باستخدام قطعة قماش جافة
أو فرشاة إزالة الأتربة الناعمة
قم بإزالة أية أتربة/أوساخ من
أطراف التوصيل في البطارية
وداخل القطعة المحمولة.

هل هناك قطعة ملحقة مفقودة؟

- افحص لوحة المحتويات في الصندوق للتأكد أن القطعة موجودة في مكنستك.

ما سبب عدم وصول التيار الكهربائي إلى المكنسة الكهربائية؟

- تحقق من تركيب البطارية بشكل صحيح في المكنسة الكهربائية.
- ربما لم يتم شحن البطارية. انتقل إلى قسم "التشغيل".
- قد تكون أطراف التوصيل في البطارية والمكنسة الكهربائية متسخة. انتقل إلى "الصيانة".
- قد تكون البطارية ساخنة جدًا، اخلعها واتركها تبرد لمدة ساعة.
- تشتمل المكنسة الكهربائية على آلية للحماية من السخونة الزائدة والتي ستؤدي إلى فصل الجهاز. إذا حدث ذلك، فأوقف تشغيل المكنسة الكهربائية. اخلع حاوية الأتربة وقم بتفريغها وافحص المكنسة الكهربائية للكشف عن أي انسدادات. قم بتنظيف الفلاتر اترك المكنسة الكهربائية تبرد لمدة ساعة كاملة تقريبًا (إذا كنت قمت بغسيل الفلاتر فالرجاء الانتظار 24 ساعة حتى يجف الفلتر تمامًا قبل إرجاعه إلى المكنسة الكهربائية).

ما سبب عدم إضاءة المصباح الموجود في المكنسة الكهربائية عند شحن البطارية؟

- تحقق من توصيل شاحن البطارية بالقباس الكهربائي. انتقل إلى قسم "التشغيل".
- تحقق من تركيب البطارية بشكل صحيح في القطعة المحمولة. انتقل إلى قسم "التشغيل".
- قد تكون أطراف التوصيل في البطارية والمكنسة الكهربائية متسخة. انتقل إلى "الصيانة".

لماذا لا تلتقط المكنسة الكهربائية الأوساخ؟

- ربما لم يتم تركيب حاوية الأتربة بشكل صحيح، اخلع حاوية الأتربة من المكنسة وتحقق من تركيبها بشكل صحيح وأعد تركيبها مع التأكد من تثبيتها في مكانها.
- لم يتم تثبيت الفاصل بشكل صحيح. انتقل إلى "الصيانة".
- الفلاتر قد تكون مسدودة، قم بتنظيفها. انتقل إلى "الصيانة".
- حاوية الأتربة قد تكون مسدودة، قم بتفريغ حاوية الأتربة. انتقل إلى "الصيانة".
- الفرشاة الموجودة في الرأس الآلي لم يتم تشغيلها. انتقل إلى "الصيانة".
- قد يكون هناك انسداد في عصا التمديد. افضلها من المكنسة وقم بإزالة أي انسداد بحذر شديد. انتقل إلى "الصيانة".

ما سبب تعذر دوران قضيب الفرشاة؟

- لم يتم تشغيل قضيب الفرشاة. انتقل إلى قسم "التشغيل".
- ربما تكون الرأس الآلي/قضيب الفرشاة قد تمت إعاقة. انتقل إلى قسم "التشغيل".

لماذا يخرج التراب من المكنسة الكهربائية؟

- الفلاتر قد تكون مسدودة، قم بتنظيفها. انتقل إلى "الصيانة".
- الفاصل قد يكون مسدودًا، قم بتنظيفه. انتقل إلى "الصيانة".
- ربما تم تركيب فلتر العادم بشكل خاطيء. انتقل إلى "الصيانة".

تنظيف الفلتر والفاصل



انقر الفلتر الشبكي والفاصل فوق صندوق ما للتخلص من أي أتربة/أوساخ. قم بمسح أي أتربة/أوساخ متبقية باستخدام قطعة قماش جافة.

إعادة تركيب الفاصل والفلتر وحاوية الأتربة

تنبيه: سيؤدي التركيب الخاطئ للفاصل والفلتر إلى تقليل الشفط.



أعد تركيب الفلتر الشبكي بحيث تكون حافة الفلتر في الأعلى. قم بلي الفلتر في اتجاه عقارب الساعة لقفله وتثبيتته في مكانه.



اضبط محاذاة الأسهم المحيطة بجانب الفاصل مع الأسهم الموجودة في القطعة المحمولة. قم بلي الفاصل في اتجاه عقارب الساعة لقفله وتثبيتته في مكانه.



عندما تستقر حاوية الأتربة في القطعة المحمولة، ادفع حاوية الأتربة إلى الخلف حتى يتم تثبيتها في مكانها.



قم بإمالة حاوية الأتربة قليلاً إلى الأمام ومحاذاتها مع القطعة المحمولة.

12: الصيانة

ملاحظة هامة: إذا تمت إعاقة قضيب الفرشاة، فربما يكون قد تم تنشيط مستشعر حماية الموتور وتمت إعاقة حركة قضيب الفرشاة. اخلع الرأس الآلي من الجهاز وقم بإزالة أي إنسداد. أعد تركيب الرأس الآلي وقم بتشغيل المكنتسة الكهربائية عن طريق الضغط على زر التشغيل واضغط على زر تشغيل/إيقاف تشغيل قضيب الفرشاة.

خلع واستبدال قضيب الفرشاة

ارفع لخلع الجانب الأيسر من قضيب الفرشاة أولاً.




قم بتحريك لتحريك قضيب الفرشاة. لا يمكن خلع الغطاء.



عند إعادة تركيب قضيب الفرشاة قم بتركيب الجانب الأيمن في المبيت أولاً. ثم قم بالمحاذاة وتركيبه في الجانب الأيسر.



قم بإزالة أي خيوط أو شعيرات من كلا طرفي قضيب الفرشاة وأي أتربة/أوساخ داخل مبيت الرأس الآلي.

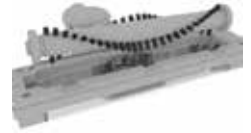


إزالة الانسدادات من الرأس الآلي

ينبغي خلع قضيب الفرشاة من الرأس الآلي قبل محاولة إزالة أي إنسدادات. باستخدام المقص، قم بإزالة أي خيوط أو شعيرات ملتفة حول قضيب الفرشاة وقم بإزالة أية أتربة أو أوساخ من الرأس الآلي.




إزالة الانسداد من عصا التمديد

للفحص عن أي انسداد في عصا التمديد، أسقط كرة ورقية صغيرة في العصا. ستمر تلك الكرة الورقية وتسقط من العصا إذا كانت العصا غير مسدودة. استخدم مقبض مكنتسة أو أي جسم غير حاد مشابه لإزالة أي إنسداد موجود.




خلع البطارية

تنبيه: اخلع البطارية دائمًا من الممكنة الكهربائية قبل تنفيذ الصيانة وإجراء الفحوصات لاستكشاف الأعطال وإصلاحها.

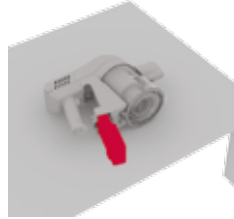

أخرج البطارية من الجانب الخلفي من القطعة المحمولة.

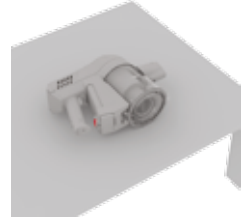

ضع القطعة المحمولة على جانبها فوق سطح مستو مسطح. اضغط على زر تحرير البطارية.

تفريغ حاوية الأتربة.

تحذير: لا تقرب في ملء حاوية الأتربة لتجنب انسداد مسار تدفق الهواء عبر الممكنة الكهربائية.



لا تستطيع عصا التمديد الوقوف بذاتها عند ربطها في الرأس الآلي/القطعة الملحقة. ولذلك ضعها على أحد جانبيها بشكل آمن ومحكم.



اضغط على مشبك تحرير القطعة المحمولة. اسحب القطعة المحمولة لفصلها عن عصا التمديد.



تأكد أن البطارية قد تم خلعها وتم تثبيت القطعة المحمولة فوق صندوق ما واضغط على زر تحرير الأتربة للسماح بخروج الأتربة/الأوساخ.

10 الصيانة:

تنظيف فلتر ما بعد الموتور

تنبيه: اخلع البطارية دائمًا من المكنسة الكهربائية قبل تنفيذ الصيانة وإجراء الفحوصات لاستكشاف الأعطال وإصلاحها. للحصول على أفضل أداء مستمر، ينبغي تنظيف الفلاتر كل 3 أشهر على الأقل وينبغي استبدالها كل 12 شهرًا حسب معدل الاستخدام. لا تستخدم هذه المكنسة الكهربائية إلا بعد تركيب الفلاتر في أماكنها.



انتظر 24 ساعة أو حتى يجف تمامًا قبل إعادة تركيبه.

اسحب لفصل الفلتر من غطاء/حامل الفلتر. انقر الفلتر وغطاء/حامل الفلتر فوق صندوق ما للتخلص من أي أتربة/أوساخ. اغسل الفلتر تحت المياه الجارية (بعد أقصى 40 درجة)

اضغط على أزرار تحرير غطاء الفلتر وهي موجودة على كلا جانبي غطاء الفلتر واسحبه لخلع الفلتر من الجهاز.

تنظيف الفلتر والفاصل

تنبيه: قم دائمًا بتفريغ حاوية الأتربة قبل تنظيف الفاصل والفلتر واخلع البطارية وعصا التمديد/الملحقات من القطعة المحمولة.



قم بلي الفاصل في عكس اتجاه عقارب الساعة كي يتم إلغاء القفل ثم ارفعه لخلعه من القطعة المحمولة.



قم بلي الفلتر الشبكي في عكس اتجاه عقارب الساعة كي يتم إلغاء القفل ثم ارفعه لخلعه من الفاصل.



اقلب القطعة المحمولة واضغط على زر تحرير حاوية الأتربة. اسحب حاوية الأتربة إلى الأمام وإلى أعلى بعيدًا عن القطعة المحمولة كي يتم خلوعها.

استعمال المكنسة كمكنسة كهربائية محمولة

توخ مزيداً من الحذر عند استخدام المكنسة الكهربائية فوق السلالم.



اختر قطعة ملحقة (الصور الموضحة تتوقف على الموديل).



لا تستطيع عصا التمديد الوقوف بذاتها عند ربطها في الرأس الآلي/القطعة الملحقة ولذلك ضعها على أحد جانبيها بشكل آمن ومحكم.



اضغط على مشبك تحرير القطعة المحمولة. اسحب القطعة المحمولة لفصلها عن عصا التمديد.



اضغط زر التشغيل واضغط على "مزلاج التشغيل المستمر" تجاه زر التشغيل. سيؤدي ذلك إلى تثبيت وضع التشغيل واستمرار تشغيل الجهاز دون أن يتوجب عليك استمرار الضغط على زر التشغيل. ادفع المزلاج بعيداً عن زر التشغيل لإلغاء القفل ولتحرير زر التشغيل.



اضغط على زر التشغيل الموجود أسفل المقبض وسيتم تشغيل الجهاز. سيضيء مصباح التشغيل/إيقاف التشغيل والشحن باللون الأخضر للإشارة إلى أن سريان التيار الكهربائي وأن الجهاز يتم شحنه. حرر زر التشغيل لإيقاف تشغيل الجهاز.



ادفع القطعة الملحقة التي يتم اختبارها في القطعة المحمولة حتى تسمع صوت طقطقة يدل على استقرارها في مكانها.

يمكن ربط كل الملحقات بما في ذلك الرأس الآلي مباشرة في القطعة المحمولة.



استعمال المكنسة كمكنسة عمودية قابلة للتمديد

يمكن استخدام عصا التمديد من أجل الوصول إلى الأماكن التي يصعب الوصول إليها.



ادفع القطعة الملحقة التي يتم اختيارها في عصا التمديد حتى تسمع صوت طقطقة يدل على استقرارها في مكانها.



اختر قطعة ملحقة (الصور الموضحة تتوقف على الموديل).



اضغط على مشبك تحرير الرأس الآلي/القطعة الملحقة لسحب وخلع الرأس الآلي من عصا التمديد.

يمكن استخدام عصا التمديد من أجل الوصول إلى الأماكن التي يصعب الوصول إليها ويمكن استخدامها بارتفاعات مختلفة من أجل تنظيف الأرضيات المرتفعة.



اضغط زر التشغيل واضغط على "مزلاج التشغيل المستمر" تجاه زر التشغيل. سيؤدي ذلك إلى تثبيت وضع التشغيل واستمرار تشغيل الجهاز دون أن يتوجب عليك استمرار الضغط على زر التشغيل. ادفع المزلاج بعيدًا عن زر التشغيل لإلغاء القفل ولتحرير زر التشغيل.



اضغط على زر التشغيل الموجود أسفل المقبض وسيتم تشغيل الجهاز. سيضيء مصباح التشغيل/إيقاف التشغيل والشحن باللون الأخضر للإشارة إلى أن سريان التيار الكهربائي وأن الجهاز يتم شحنه. حرر زر التشغيل لإيقاف تشغيل الجهاز.

هذه المكنسة الكهربائية القائمة الرفيعة لا تقف بذاتها ويجب وضعها أثناء الاستخدام بحيث تستند على كتيفة الحائط أو وضعها فوق الأرضية في مكان مناسب بحيث لا يتم التعثر بها أو السير فوقها.



الرجاء قراءة قسم "معلومات السلامة العامة" قبل البدء في استخدام هذا الجهاز

تنبيه: قد تشكل البطارية المستخدمة في هذا الجهاز خطر نشوب حريق أو حروق كيميائية إذا تم التعامل معها بشكل خاطيء. لا تقم بالتفكيك أو التسخين بما يزيد عن الحد الأقصى الذي حددته شركة التصنيع لدرجة الحرارة وهو (60 درجة مئوية / 140 درجة فهرنهايت) ولا تقم بحرقها. لا تستبدل البطارية إلا ببطارية هوفر. قد يؤدي استخدام بطارية أخرى إلى خطر نشوب حريق أو وقوع انفجار. تخلص من البطارية المستعملة بسرعة. احتفظ بها بعيداً عن متناول الأطفال. لا تقم بتفكيكها أو التخلص منها بإلقائها في النار. لا تحاول تفكيك البطارية أو إزالة أي مكونات بارزة من أطراف التوصيل بها. لا تشمل البطارية والشاحن على أجزاء يسمح للمستخدم بصيانتها. قد يؤدي ذلك إلى نشوب حريق أو وقوع إصابة. قبل التخلص من البطارية، احمر أطراف التوصيل المكشوفة بشريط عازل ثقيل لمنع حدوث تقاصر كهربائي. اخلع البطارية من الجهاز قبل التخلص منها بشكل آمن في مركز إعادة تدوير البطاريات في منطقتك.


للحصول على أفضل أداء، يجب أن تكون أطراف التوصيل في كل من البطارية والجهاز نظيفة وخالية من الغبار والأتربة. لا تحاول إعادة شحن بطاريات غير قابلة لإعادة الشحن. يجب خلع البطارية من الجهاز قبل التخلص منه. يجب فصل الجهاز من الشاحن قبل استخدامه وعند خلع أو تركيب البطارية في الجهاز. في حالة حدوث تسربات بالبطارية، تجنب ملامستها مع البشرة.

تركيب البطارية وشحنها

تنبيه: يجب فصل الجهاز من مصدر التيار الكهربائي عند خلع البطارية.

ملاحظة: يمتد الشحن الأولي إلى 8 ساعات وسيكون من الضروري الشحن قبل الاستخدام للمرة الأولى. يمكن شحن المكينة الكهربائية مع ربط القطعة المحمولة أو خلعها من عصا التمديد. قد يؤدي عدم شحن البطارية تمامًا قبل الاستخدام للمرة الأولى (الشحن الأولي لمدة 8 ساعات) إلى ضعف أداء البطارية.

لشحن الجهاز، أفضل عصا التمديد وضع القطعة المحمولة على جانبها فوق سطح ثابت مستو. يمكنك أيضًا شحن الجهاز أثناء ربطه في كثيفة الحائط تأكد أن رأس تنظيف الأرضيات وعصا التمديد قد تم ربطهما معًا.

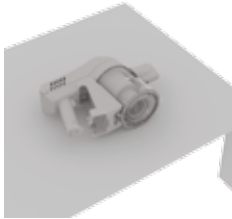

أدخل البطارية في الجانب الخلفي من القطعة المحمولة. سيصدر صوت طقطقة من البطارية عند تركيبها بشكل صحيح.



اقبس قابس الشاحن في مصدر التيار الكهربائي الرئيسي.



أدخل سلك الشاحن في مدخل الشاحن الموجود في الجانب الخلفي من القطعة المحمولة.



شحن البطارية

تنبيه: لا تستخدم المكنسة الكهربائية عند توصيلها بالقياس الكهربائي وأثناء شحنها.
تنبيه: للحصول على أفضل أداء، يجب أن تكون أطراف التوصيل في كل من البطارية والمكنسة الكهربائية نظيفة وخالية من الغبار والأتربة. يتباين العمر الافتراضي للبطارية حسب استعمال المكنسة الكهربائية.

سيضيء مصباح التشغيل/إيقاف التشغيل ومصباح الشحن إضاءة مستمرة أثناء توصيل الشاحن.

إضاءة حمراء - البطارية تقوم بالشحن.
 إضاءة خضراء - البطارية مشحونة (بعد 5 ساعات).

في حالة الشحن للمرة الأولى، تصل مدة الشحن إلى 8 ساعات.



تنبيه: تشتمل هذه المكنسة الكهربائية الكهربائية على قضيب فرشاة دوار باستمرار عند تحديد وضع تشغيل 'ON' قضيب الفرشاة. لا تترك المكنسة الكهربائية في موضع واحد فوق أي سطح لفترة زمنية مطولة لأن ذلك قد يتسبب في إتلاف سطح الأرضية. ينبغي أن يكون قضيب الفرشاة في وضع التشغيل ON في حالة السجاد وفي وضع إيقاف التشغيل OFF في حالة الأرضيات الصلبة.

استعمال المكنسة مكنسة كهربائية عمودية



اضغط على زر تشغيل/إيقاف تشغيل قضيب الفرشاة كي يتم التنشيط. كرر هذه العملية لتعطيل قضيب الفرشاة. ينبغي أن يكون قضيب الفرشاة في وضع التشغيل ON في حالة السجاد وفي وضع إيقاف التشغيل OFF في حالة الأرضيات الصلبة.

اضغط زر التشغيل واضغط على "مزلاج التشغيل المستمر" تجاه زر التشغيل. سيؤدي ذلك إلى تثبيت وضع التشغيل واستمرار تشغيل الجهاز دون أن يتوجب عليك استمرار الضغط على زر التشغيل. ادفغ المزلاج بعيداً عن زر التشغيل لإلغاء القفل ولتحرير زر التشغيل.

اضغط على زر التشغيل الموجود أسفل المقبض وسيتم تشغيل الجهاز. سيضيء مصباح التشغيل/إيقاف التشغيل والشحن باللون الأخضر للإشارة إلى أن سريان التيار الكهربائي وأن الجهاز يتم شحنه. حرر زر التشغيل لإيقاف تشغيل الجهاز.

عند وجود المكنسة الكهربائية قيد الاستخدام سيضيء مصباح التشغيل/إيقاف التشغيل والشحن وسيومض باللون الأحمر عند انخفاض شحن البطارية. عند الويمض باللون الأحمر، سيتم إيقاف تشغيل الجهاز في غضون 20 ثانية. يجب أن يقوم المستخدم بإعادة شحن الجهاز.



الرجاء قراءة قسم "معلومات السلامة العامة" قبل البدء في استخدام هذا الجهاز

تنبيه: أوقف دائماً تشغيل المكينة الكهربائية قبل توصيل أو فصل المكونات المحمولة/الملحقات أو خلع حاوية الأتربة وتفريغها.

ملاحظة هامة: يتم تزويد المكينة الكهربائية بألية للحماية من السخونة الزائدة. سيقوم الثرموستات تلقائياً بإيقاف تشغيل المكينة الكهربائية في حالة زيادة سخونة المكينة الكهربائية لأي سبب من الأسباب. اخلع البطارية في حالة حدوث ذلك، اخلع حاوية الأتربة وقم بتفريغها وافحص المكينة الكهربائية للكشف عن أي انسدادات. اترك المكينة الكهربائية تبرد لمدة ساعة كاملة تقريباً (إذا كنت قمت بتنظيف الفلتر فالرجاء الانتظار 24 ساعة حتى يجف الفلتر تماماً قبل إرجاعه إلى الجهاز). للحصول على أفضل نتائج التنظيف، ينبغي تنظيف الفلاتر كل 3 أشهر على الأقل وينبغي استبدالها كل 12 شهراً حسب معدل الاستخدام. في حالة انسداد المكينة الكهربائية، اخلع البطارية قبل إزالة الانسداد.

تجميع وتركيب أجزاء المكينة الكهربائية العمودية Cruise

تنبيه: هذه المكينة الكهربائية لا تقف بذاتها دون دعم. يجب وضعها على الأرضية أثناء الاستخدام في مكان مناسب بحيث لا يتم التعثر فيها أو السير فوقها.



هذه المكينة الكهربائية القائمة الرفيعة لا تقف بذاتها ويجب وضعها أثناء الاستخدام بحيث تستند على كتيفة الحائط أو وضعها فوق الأرضية في مكان مناسب بحيث لا يتم التعثر بها أو السير فوقها.



ادفع القطعة المحمولة إلى أسفل في عصا التمديد حتى تسمع صوت طقطقة يدل على استقرارها في مكانها.



قم بمحاذاة الموصل في عصا التمديد مع الرأس الأكي. ادفع عصا التمديد إلى أسفل في الرأس الأكي حتى تسمع صوت طقطقة يدل على استقرارها في مكانها.



عند ربط كتيفة الحائط،
انصب المكنسة بحيث تقف
بجوار الحائط في الوضع
القائم مع وجود الرأس
الآلي في الوضع المسطح على
الأرضية.



اربط كتيفة الحائط في
المقبض.



قم بتجميع وتركيب أجزاء
المكنسة بالكامل ولكن لا
تركب البطارية.



استخدم كلاً من المسامير
وقوابس الحائط لتثبيت
كتيفة الحائط في الحائط. ضع
الأغطية فوق المسامير.



لا بد من تثبيت كتيفة الحائط
ياحكام في مكانها مع خلع
المكنسة الكهربائية بحذر.
قم بعمل علامة صغيرة
لكل مسمار باستخدام قلم
رصاص.




يمكن تخزين حقيبة الأدوات
والمحقات في كتيفة الحائط



اضغط ياحكام على مقبض
المكنسة في كتيفة الحائط
لإحكام تثبيته.

نظرة عامة على الجهاز

الوحدة

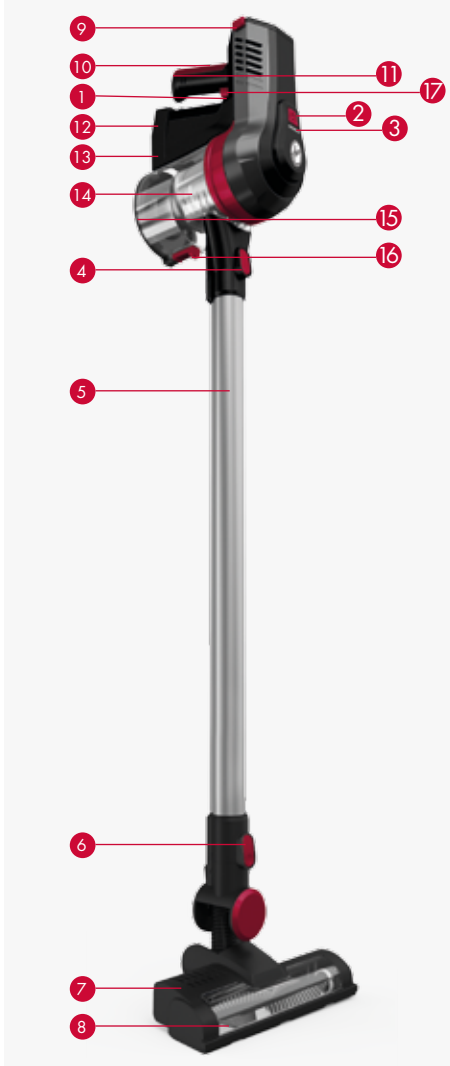

- 1 زر التشغيل/إيقاف التشغيل
- 2 زر تشغيل/إيقاف تشغيل قضيب الفرشاة
- 3 مصباح التشغيل/إيقاف التشغيل والشحن
- 4 زر التحرير النقال
- 5 عصا التمديد
- 6 مشبك تحرير الرأس الآلي/الملحقات
- 7 الرأس الآلي
- 8 قضيب الفرشاة
- 9 أزرار تحرير غطاء الفلتر
- 10 المقبض
- 11 مدخل شاحن البطارية
- 12 زر تحرير البطارية
- 13 البطارية
- 14 حاوية الأتربة
- 15 زر تحرير حاوية الأتربة (مخفي)
- 16 زر تحرير الأتربة
- 17 مزلاج التشغيل المستمر (مخفي)

الملحقات



أداة تنظيف الشقوق
(بعض الموديلات فقط)



الأداة العلوية
(بعض الموديلات فقط)



أداة تنظيف الباركيه
(بعض الموديلات فقط)



أداة 3 في 1

- 1 لا تقف هذه المكنتسة الكهربائية في الوضع القائم بدون دعم ثابت ويجب وضعها على الأرضية أثناء الاستخدام في مكان مناسب بحيث لا يتم التعثر فيها أو السير فوقها.
- 2 لا تستخدم هذه المكنتسة الكهربائية إلا في أماكن داخلية فوق أسطح جافة وحافظ على الإضاءة الجيدة في المنطقة التي تقوم بتنظيفها وكنسها.
- 3 أبعد أصابع اليد والشعر والملابس الفضفاضة بعيداً عن الأجزاء المتحركة والفتحات أثناء استخدام هذه المكنتسة الكهربائية.
- 4 يمكن استخدام هذه المكنتسة بواسطة الأطفال الذين يبلغون من العمر 8 سنوات أو أكبر وكذلك بواسطة الأشخاص الذين يعانون من قصور جسدي أو حسي أو عقلي أو نقص الخبرة والمعرفة بشرط خضوعهم للإشراف وتوعيتهم بالإرشادات الخاصة باستخدام الجهاز بطريقة آمنة وأن يفهموا المخاطر الكامنة. ينبغي ألا يعبث الأطفال بهذه المكنتسة الكهربائية.
- 5 ينبغي ألا يقوم الأطفال بالتنظيف أو بخطوات الصيانة التي يقوم بها المستخدم دون الإشراف عليهم.
- 6 يجب ألا يتم استخدام سوى الأدوات والملحقات التي توصي هوفر بها مع هذه المكنتسة الكهربائية.
- 7 يجب خلع البطارية من الجهاز قبل التخلص منه.
- 8 لا تشحن المكنتسة الكهربائية في أماكن خارجية مفتوحة أو تترك الشاحن متصلاً بمصدر التيار الكهربائي عند عدم استخدامها.
- 9 لا تستخدم المكنتسة الكهربائية في حالة سقوطها أرضاً أو تلفها أو غمرها في الماء أو تركها في أماكن خارجية.
- 10 لا تمسك قابس الشاحن أو المكنتسة الكهربائية أو تستخدمها بيدين مبللتين.
- 11 لا تلمس سلك الشاحن بقدمك أو تستخدم المكنتسة الكهربائية في حالة تلك سلك أو قابس الشاحن.
- 12 لا تستخدم المكنتسة الكهربائية في تنظيف الأجسام الصلبة أو الحادة مثل الزجاج أو المسامير أو البراغي أو العملات أو غير ذلك.
- 13 لا تحاول إزالة الانسدادات باستخدام أجسام حادة لأن ذلك قد يؤدي إلى إتلاف المكنتسة الكهربائية.
- 14 لا تستخدم المكنتسة الكهربائية في التقاط أعقاب جمرات الفحم المشتعلة أو أعقاب السجائر أو عيدان الثقاب أو الأشياء المشتعلة التي ينبعث الدخان منها ولا تستخدمها في منطقة قد تكون بها سوائل ضارة (مثل الكلور وسائل التبييض ومنقي الصرف من الأمونيا).
- 15 لا تستخدم هذه المكنتسة الكهربائية مع فولتية غير صحيحة لأن ذلك قد يؤدي إلى إتلافها أو إصابة المستخدم. يتم توضيح قيمة الجهد الكهربائي المناسب في لوحة المعايرة.
- 16 لا تترك المكنتسة الكهربائية في مكان واحدة لمدة طويلة عند تشييط قضيب الفرشاة. يتم تزويد هذه المكنتسة الكهربائية بقضيب فرشاة دوار وقد يتسبب تركه في مكان واحد إلى إتلاف سطح الأرضيات.
- 17 أوقف دائماً تشغيل المكنتسة الكهربائية وانزع قابسها من الشاحن واخلع البطارية قبل تنفيذ أي صيانة. الرجاء الرجوع إلى القسم المناسب في دليل المستخدم لمراجعة الاحتياطات الضرورية.
- 18 تأكد دائماً أن الفلتر وحاوية الأتربة تم تركيبهما بشكل صحيح قبل استخدام هذه المكنتسة الكهربائية.
- 19 أوقف دائماً تشغيل المكنتسة الكهربائية قبل فصل أو توصيل عصا التمديد والملحقات.
- 20 احتفظ بكل الفتحات خالية من الأوساخ لأن ذلك قد يؤثر في تدفق الهواء/الشفط.
- 21 قم دائماً بحماية سلك الشاحن من الأسطح الساخنة أو عند الاقتراب من أسنة اللهب المكشوفة.
- 22 إذا كانت المكنتسة الكهربائية يتم شحنها من سلك إطالة، فلا تستخدم سوى أسلاك الإطالة المعتمدة، لا تستخدم أسلاك الإطالة غير المعتمدة.

الرجاء الاحتفاظ بهذه التعليمات بحيث يتم استخدامها في المستقبل.



سلسلة
Cruise
دليل المستخدم

TBTTV3B1

TBTTV3T1

hoover-mea.com